

TranquilTone

White Noise Machine

User Manual



SAFETY PRECAUTIONS:

To ensure safe use of this product, please follow these guidelines:

1. Keep the product away from rain, water, or damp environments. Always store in a dry place.
2. Do not splash liquid on or near the product.
3. Do not press the buttons with excessive force.
4. If cleaning is required, use only a dry or slightly damp soft cloth. Do not use corrosive cleaners or solvents.


TECHNICAL SPECIFICATIONS:

1. Speaker Driver: 33mm, 4Ω, 3W
2. THD+N: ≤1% (1W, 1KHz)
3. SNR: ≥72 dB
4. RMS: 3W
5. Input: DC 5V
6. Average Output: 80 dB
7. Product Size: Φ51mm × H55mm
8. Product Weight: ~72g

FEATURES:

1. 15 soothing sounds (see list below)
2. Compact, lightweight, handheld design
3. Transparent casing shows internal details
4. Soft silicone buttons for comfortable touch
5. RGB multi-color night lights
6. Sleep timer: 30 / 60 / 90 minutes
7. Memory function (remembers last settings)
8. Child lock function for safety
9. USB-C charging port

BUTTON FUNCTIONS:

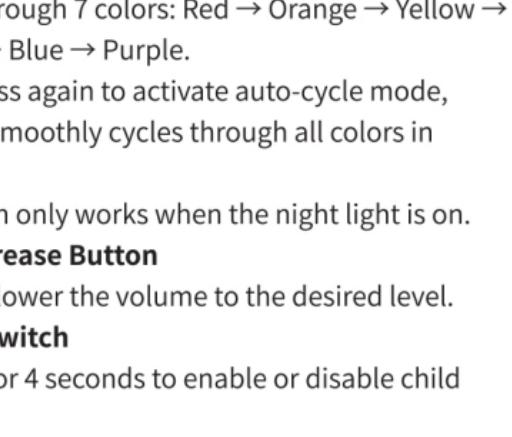

3.) Light Color Button

Press to cycle through 7 colors: Red → Orange → Yellow → Green → Cyan → Blue → Purple. If no timer is selected, the machine will play continuously until manually turned off. After Purple, press again to activate auto-cycle mode, where the light smoothly cycles through all colors in sequence.

Note: This button only works when the night light is on.

4.) Volume Decrease Button

Press or hold to lower the volume to the desired level.

5.) Child Lock Switch

Press and hold for 4 seconds to enable or disable child lock.

Note: Prevents accidental operation by children.

6.) Volume Increase Button

Press and hold to turn the unit on or off.

Note: The machine remembers the last settings when restarted.

7.) Sounds Button

Press to cycle through 15 built-in sounds (Brown Noise, Pink Noise, Fan 1, Fan 2, Forest Bird, Cricket, Wind, Light Rain, Brook, Ocean Waves, Campfire, Lullaby, Twinkle Twinkle Little Star, Shushing, Chakra Meditation).

3

8.) Timer Button

Press to select a sleep timer (30 / 60 / 90 minutes). If no timer is selected, the machine will play continuously.

After Purple, press again to activate auto-cycle mode, where the light smoothly cycles through all colors in sequence.

Note: This button only works when the night light is on.

9.) Timer Indicator

Lights up to show active timer setting (30/60/90 minutes). No light = continuous play mode.

10.) Power Indicator

Red = charging

Green = fully charged

Flashing red = low battery

11.) Child Lock Indicator

Yellow = child lock enabled

Off = child lock disabled

12.) USB-C Charging Port

For use with 5V / 1A power adapter.

Warranty & Support

All TranquilTone products are backed by a 12-month limited warranty covering defects in materials or workmanship under normal use. If your unit stops working during this period, we'll provide a replacement.

This warranty does not cover damage caused by misuse, accidents, or unauthorized modifications.

For assistance, please contact us at support@tranquiltone.com with your Amazon order ID.

4

5

6

1

2